

1



2



3



WITH TWIST&LOCK INNERLOCK

HEAD TO POLE ASSEMBLY INSTRUCTIONS

4



HI, MY NAME IS DAN FENSTEMAKER, INVENTOR OF INTELETOOL. I'D LIKE TO BETTER ACQUAINT YOU WITH HOW I.T. WORKS!

STEP 1- SELECT THE HEAD OF YOUR CHOICE

STEP 2- PLACE THE HEAD IN THE POLE END,
MAKING SURE THE COLLAR IS
LOOSENED COUNTER-CLOCKWISE

STEP 3- SECURE THE HEAD BY PLACING IT IN THE
COLLAR AND THEN BY ROTATING
CLOCKWISE TO THREAD THE HEAD INTO
THE POLE

STEP 4. GRAB THE UPPER SECTION OF THE POLE
WITH ONE HAND AND ROTATE THE
COLLAR CLOCKWISE UNTIL IT IS SNUG

STEP 5. NOW GET TO WORK

5



POLE OPERATION INSTRUCTIONS

1



2



3



4



5



STEP 1-LOOSEN THE LARGE COLLAR

BY TURNING COUNTER CLOCKWISE

STEP 2-GRAB THE TOP SECTION OF THE

POLE AND PULL OUT

STEP 3-EXTEND POLE TO DESIRED LENGTH

STEP 4-WITH ONE HAND, GRAB THE LOWER

SECTION, WITH THE OTHER, GRAB

THE UPPER SECTION. TWIST UPPER

SECTION TOWARD YOU AND LOWER

SECTION AWAY FROM YOU UNTIL YOU

FEEL RESISTANCE AND THEN HEAR A CLICK

THE INNERLOCK IS NOW ENGAGED.

STEP 5-TIGHTEN LARGE COLLAR LOCK .

INTELEPOLE IS NOW READY FOR USE

TURN TO BACK CENTER FOR REMAINING PICTURES-

FOR MORE HEADS AND ACCESSORIES

VISIT OUR WEBSITE AT WWW.INTELETOOL.COM

Copyright 2009 FENSTEMAKER ENTERPRISES LLC



WITH TWIST&LOCK INNERLOCK
POLE OPERATION AND
HEAD TO POLE ASSEMBLY
INSTRUCTIONS

